


# SPIROL®

COILED SPRING PINS FOR COSMETIC CASE HINGES

## SPIROL® Series 550 Cosmetic Coiled Pins

The unique flexibility of the Series 550 Cosmetic Coiled Pin makes it the ideal hinge pin for compact cases.

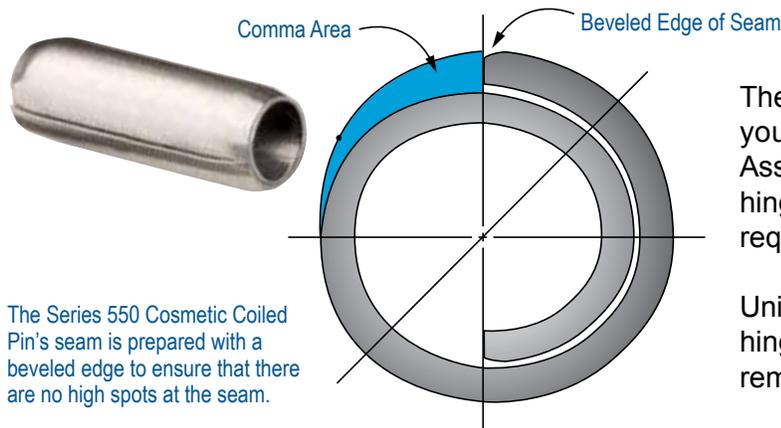

The Series 550 Cosmetic Coiled Pin's seam is prepared with a beveled edge to ensure that there are no high spots at the seam.

The use of a Cosmetic Coiled Pin will simplify your design and manufacturing process. Assembly is easier and less expensive, and the hinge performance will exceed swing torque requirements.

Uniform radial spring force results in controlled hinge movement and a hinge quality that remains consistent over time.

Controlled hinge movement is achieved with wider tolerances and lower molding costs than with a solid pin or cut wire.


Low insertion force and compression of the pin during installation minimize hinge stress and scrap.



Constant radial force

Contact **SPIROL** for design assistance:  
[www.spirol.com/s/cosmeticdesign/](http://www.spirol.com/s/cosmeticdesign/)

### Specifications

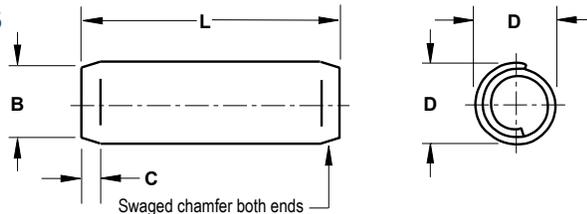

Nominal Diameter	Dim. "D" Pin Diameter		Dim. "B" Chamfer Diameter	Dim. "C" Chamfer Length	Recommended Hole Diameter		Dim. "L" Standard Lengths (Tolerance = ± 0.25)					
	Min.	Max.	Max.	(Ref.)	Min.	Max.	6	8	10	12	14	16
1.2	1.27	1.35	1.15	0.40	1.19	1.22						
1.5	1.60	1.68	1.40	0.50	1.49	1.53						

**Standard Material** Nickel Stainless Steel SAE 302/304, 1.4310 (18-8)      **Standard Finish** Plain - Oil Free

### Design Guidelines

The use of a Cosmetic Coiled Pin will simplify design as misalignment of the inner and outer holes to provide friction is no longer necessary. Intentional misalignment is difficult to control in production and induces stress in the hinge area causing cracking and pin fallout.

- Misalignment should not exceed 0.05mm.
- 60% or more pin length retained by the inner hole.
- Minimum bearing surface in either hole should exceed three times the diameter of the pin.
- The inner hole depth should be at least 0.35mm deeper than the retained pin length to prevent breaks at assembly.
- The holes in the cover and the base should be precision matched to achieve maximum friction swing torque.

### Pin Installation Technology

The **Model HC, Horizontal, Dual Pin Inserter** was developed specifically for installing Series 550 Cosmetic Coiled Pins into plastic hinges.

This machine dramatically increases production efficiency with minimal operator training and effort.



**SPIROL** Application Engineers will review your application needs and work with you to recommend the optimum solution. One way to start the process is to visit our **Optimal Application Engineering** portal at **SPIROL.com**.

### Technical Centers

**Americas** **SPIROL International Corporation**  
30 Rock Avenue  
Danielson, Connecticut 06239 U.S.A.  
Tel. +1 860 774 8571  
Fax. +1 860 774 2048

**SPIROL Shim Division**  
321 Remington Road  
Stow, Ohio 44224 U.S.A.  
Tel. +1 330 920 3655  
Fax. +1 330 920 3659

**SPIROL Canada**  
3103 St. Etienne Boulevard  
Windsor, Ontario N8W 5B1 Canada  
Tel. +1 519 974 3334  
Fax. +1 519 974 6550

**SPIROL Mexico**  
Avenida Avante #250  
Parque Industrial Avante Apodaca  
Apodaca, N.L. 66607 Mexico  
Tel. +52 81 8385 4390  
Fax. +52 81 8385 4391

**SPIROL Brazil**  
Rua Mafalda Barnabé Soliane, 134  
Comercial Vitória Martini, Distrito Industrial  
CEP 13347-610, Indaiatuba, SP, Brazil  
Tel. +55 19 3936 2701  
Fax. +55 19 3936 7121

**Europe** **SPIROL France**  
Cité de l'Automobile ZAC Croix Blandin  
18 Rue Léna Bernstein  
51100 Reims, France  
Tel. +33 3 26 36 31 42  
Fax. +33 3 26 09 19 76

**SPIROL United Kingdom**  
17 Princewood Road  
Corby, Northants  
NN17 4ET United Kingdom  
Tel. +44 1536 444800  
Fax. +44 1536 203415

**SPIROL Germany**  
Ottostr. 4  
80333 Munich, Germany  
Tel. +49 89 4 111 905 71  
Fax. +49 89 4 111 905 72

**SPIROL Spain**  
08940 Cornellà de Llobregat  
Barcelona, Spain  
Tel. +34 93 669 31 78  
Fax. +34 93 193 25 43

**SPIROL Czech Republic**  
Sokola Tümy 743/16  
Ostrava-Mariánské Hory 70900  
Czech Republic  
Tel. +420 417 537 979

**SPIROL Poland**  
Aleja 3 Maja 12  
00-391 Warszawa, Poland  
Tel. +48 510 039 345

**Asia Pacific** **SPIROL Asia Headquarters**  
1st Floor, Building 22, Plot D9, District D  
No. 122 HeDan Road  
Wai Gao Qiao Free Trade Zone  
Shanghai, China 200131  
Tel. +86 21 5046 1451  
Fax. +86 21 5046 1540

**SPIROL Korea**  
160-5 Seokchon-Dong  
Songpa-gu, Seoul, 138-844, Korea  
Tel. +86 (0) 21 5046-1451  
Fax. +86 (0) 21 5046-1540

e-mail: [info@spirol.com](mailto:info@spirol.com)